




## GM 1970-81 F, 1973-77 A/G Body LS2/3 Gas Pedal Adapter Installation Instructions

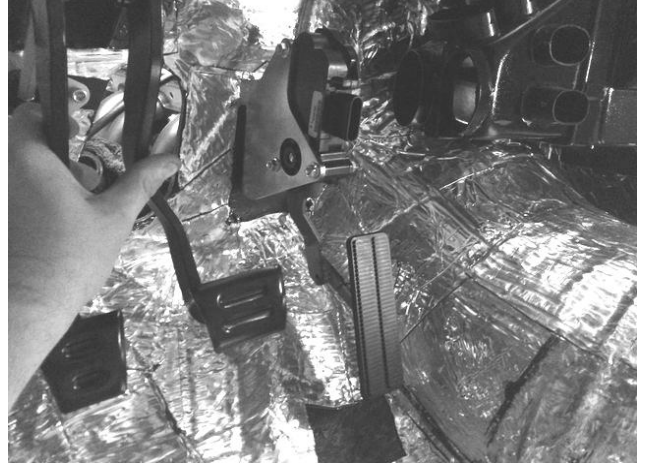

1. Remove accelerator switch from box, remove and discard attached mounting bracket, retain bolts and lock nuts.
2. Drill out dimple on lower lever with a 0.250" drill bit.
3. Mount pedal pad to extension as shown in first picture. Existing pin and spring will fit as stock.
4. Mount extension inboard of switch lever with 1/4 x 3/4" bolt, lock washer and nut.
5. Mount bracket to firewall as shown, the nylon spacers are sandwiched between the firewall and bracket to clear the insulation padding.
6. Mount switch assembly outboard to bracket with switch bolts.
7. Loosen extension bolt and rotate to the best position. We used a small vise grip to hold in position. Once satisfied with position, carefully remove switch (leave firewall bracket) and drill a second 0.250" hole and insert a second bolt assembly to secure.
8. Reassemble and plug in harness.

**This bracket is designed for compatibility with a 2004-2015 Cadillac CTS throttle pedal assembly, GM part number 10379039.**

GAS A16 kit includes: (1) firewall mounting bracket, (1) pedal extension bracket, (2) 1/4-20 bolts, (2) 1/4-20 Nyloc nuts and (4) nylon spacers

**Scarebird Classic Brakes LLC warrants our product for 90 days after purchase against manufacturing defects. Scarebird Classic Brakes LLC is not responsible and held harmless for errors/damage/injury due to faulty installation or use of non-specified/inferior components or adaptation to non-OEM applications. If you do not agree to this, please send components back unused for refund. Scarebird Classic Brakes LLC reserves the right to change/delete components/applications without notice. Please do not hesitate to email us for latest specifications or technical inquiries. Contact: [sales@scarebird.com](mailto:sales@scarebird.com) Thank you.**